





SLICE[®] 142 QUICK START GUIDE




***SAFETY: ALWAYS TURN OFF POWER AND DISCONNECT THE AIR LINES BEFORE INVESTIGATING JAMS OR INTERNALS ISSUES. NEVER PLACE FINGERS, HANDS, OR TOOLS INTO THE MACHINE WHILE IT IS PLUGGED IN OR AIR CONNECTED.**

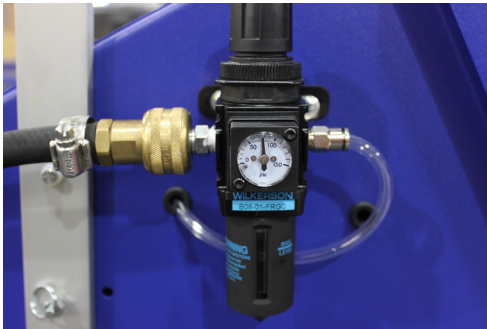


1. CONNECT AIRLINE, SET AT 80 PSI.

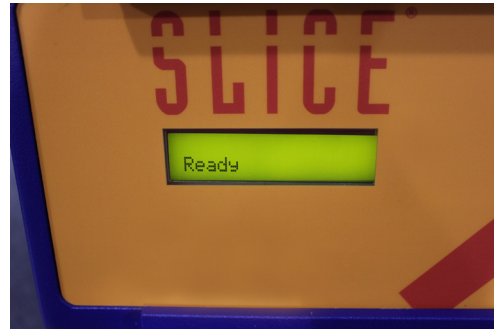


2. TURN ON SWITCH LOC. IN REAR OF MACHINE.

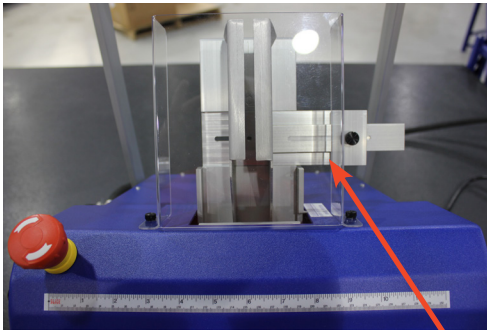


3. ADJUST TOP INPUT GUIDE (141) WITH MATERIAL INSERTED. MATERIAL MUST BE CENTERED. TOP SAFETY SHIELD

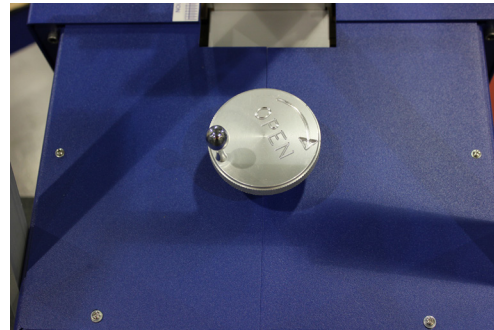

4. CLOSE WHEELS W/ADJUSTABLE HAND CRANK. TOO LOOSE: MATERIAL WILL NOT BE INDEXED AND SLIP. TOO TIGHT: MATERIAL MAY BE CRUSHED. MAKE NOTE OF WHEEL POSITION INDICATOR FOR FUTURE REF.

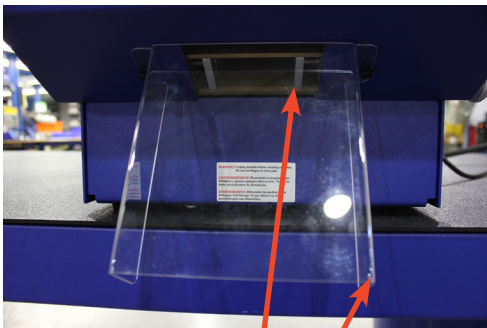

5. BOTTOM GUIDE
BOTTOM SAFETY SHIELD

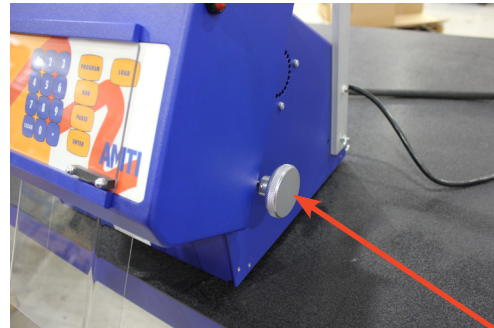

6. ADJUST BOTTOM GUIDE WHEEL APPROX. $\frac{1}{4}$ " ON EACH SIDE OF MATERIAL



7. SLICE KEYPAD SAFETY SHIELD TO LEFT.




8. HIT "LOAD" KEY AND SLIDE KEYPAD SAFETY SHIELD BACK TO RIGHT.



9. FEED MATERIAL INTO THE THROAT AND PRESS LH & RH ACTIVATION BUTTONS. MATERIAL WILL ADVANCE FOR ONE CUT CYCLE FOR LOAD SEQUENCE.



10. TO RUN: SLIDE KEYPAD SAFETY SHIELD TO LEFT. PRESS "RUN".

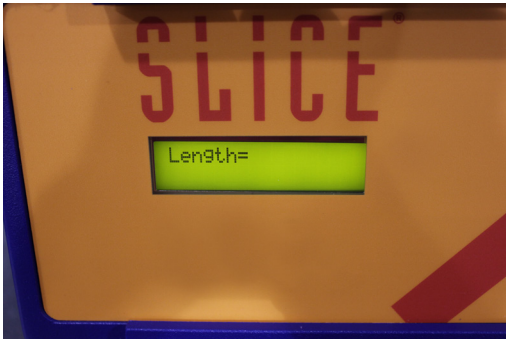

11. LCD WILL SHOW "LENGTH", ENTER LENGTH.



12. PRESS "ENTER".



13. LCD WILL SHOW "COUNT" ENTER QUANTITY. THEN PRESS "ENTER".



14. PRESS "RUN". SLIDE KEYPAD SAFETY SHIELD BACK TO RIGHT.



15. PRESS LH & RH ACTIVATION BUTTONS TO INITIATE PROCESSING.

NOTES:

1. THE LH & RH ACTIVATION BUTTONS ONLY NEED TO BE PRESSED ONCE AND NOT HELD IN PLACE DURING "RUN" CYCLE.

2. KEYPAD SAFETY SHIELD MUST BE SLID BACK TO RIGHT HAND SIDE OF MACHINE DUE TO SENSOR LOCATION. IF IT IS NOT, THEN THE SLICE MACHINE WILL NOT PROCEED WITH EITHER LOAD OR RUN CYCLES.

***SEE MANUAL FOR ALL SAFETY INFORMATION**

www.amtiproducts.com
847.588.7090