




QUICK START GUIDE




1. CONNECT AIR LINE TO 1/4" NPT NIPPLE. SET REGULATOR TO 80 PSI.




2. PLUG IN POWER CORD AND TURN POWER ON. DISPLAY APPEARS IN A FEW SECONDS.

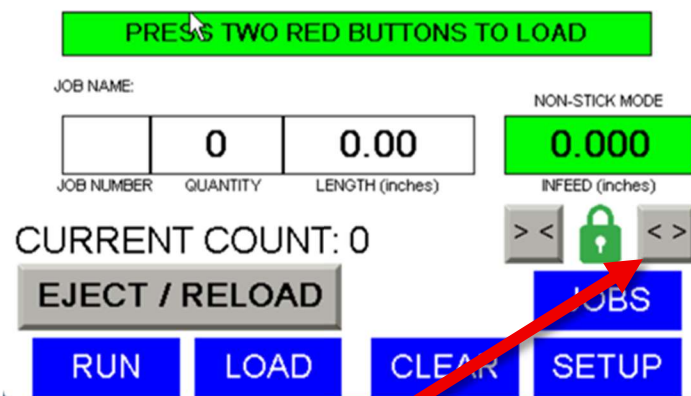


3. PRESS THE OPEN BUTTON TO OPEN THE INPUT WHEELS. INSERT MATERIAL.

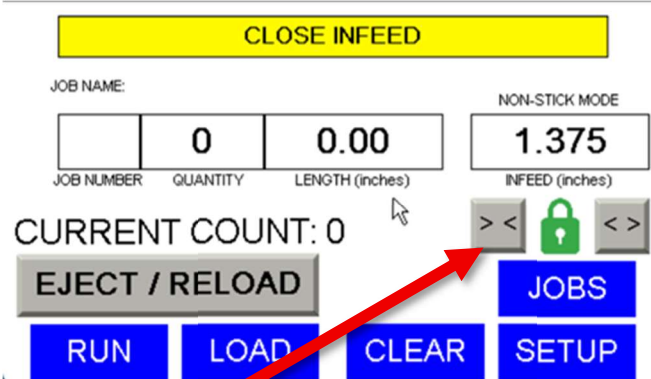

4. PRESS THE CLOSE BUTTON TO CLOSE/CLAMP THE INPUT WHEELS TO PREVENT SLIPPAGE.

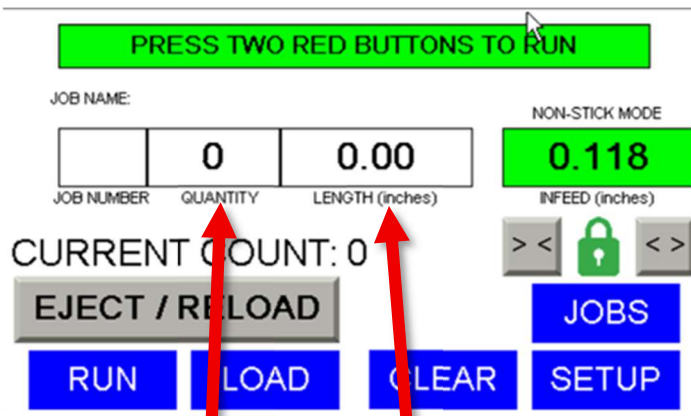

5. ENTER JOB QUANTITY AND PIECE LENGTH.

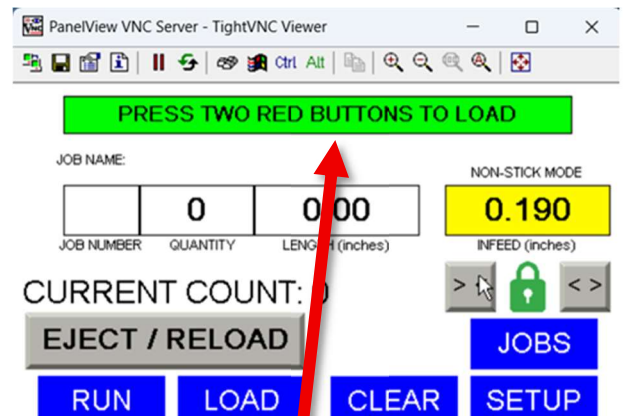



6. PRESS BOTH RED BUTTONS ON THE SIDE OF THE MACHINE TO LOAD MATERIAL AND CROP CUT



MAKE SURE TOP &
BOTTOM SAFETY
GUARDS ARE ATTACHED



1.1 QUICK START GUIDE CONT

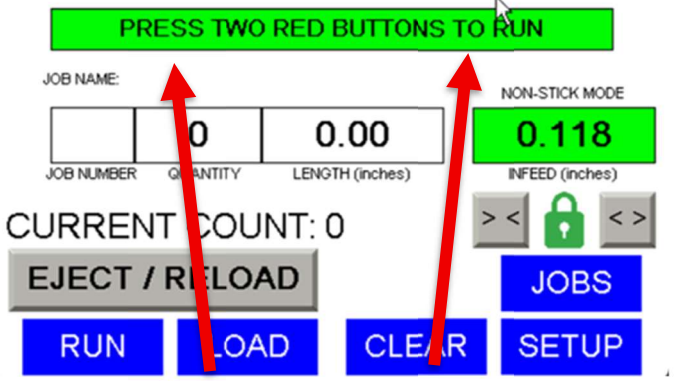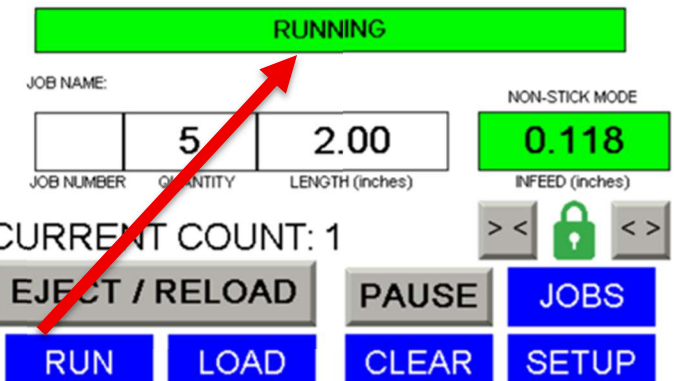 PRESS TWO RED BUTTONS TO RUN JOB NAME: [] [0] [0.00] [0.118] JOB NUMBER QUANTITY LENGTH (inches) INFEED (inches) CURRENT COUNT: 0 EJECT / RELOAD JOBS RUN LOAD CLEAR SETUP	 RUNNING JOB NAME: [] [5] [2.00] [0.118] JOB NUMBER QUANTITY LENGTH (inches) INFEED (inches) CURRENT COUNT: 1 EJECT / RELOAD PAUSE JOBS RUN LOAD CLEAR SETUP
7. AGAIN, PRESS BOTH RED BUTTONS ON THE SIDE OF THE MACHINE TO NOW "RUN"	8. CONFIRM STATUS SHOWS "RUNNING"



MAKE SURE TOP &
BOTTOM SAFETY
GUARDS ARE ATTACHED



TO RUN MACHINE FROM JOBS

LOAD JOB

PRESS TWO RED BUTTONS TO LOAD

JOB NAME:

JOB NUMBER	0	0.00	NON-STICK MODE
QUANTITY		LENGTH (inches)	INFEEED (inches)

CURRENT COUNT: 0

EJECT / RELOAD

JOBS

RUN LOAD CLEAR SETUP

1. FROM HOME, PRESS "JOBS".

JOBS

Jobs: 1 / 150

Load Job

Save Job

Delete Job

HOME ABOUT PREV NEXT

2. PRESS "LOAD JOB"

LOAD JOB

NUMBER	NAME
1	langofix G.750
2	Calibration
3	Test2
4	test3
150	libration

HOME

3. Remember the Job Number. Press JOB NUMBER TO LOAD NUMBER. Enter the Job Number in the Key Pad.

PRESS TWO RED BUTTONS TO LOAD

JOB NAME:

JOB NUMBER	0	0.00	NON-STICK MODE
QUANTITY		LENGTH (inches)	INFEEED (inches)

CURRENT COUNT: 0

EJECT / RELOAD

JOBS

RUN LOAD CLEAR SETUP

4. PRESS BOTH RED BUTTONS ON THE SIDE OF THE MACHINE TO LOAD MATERIAL AND CROP CUT

PRESS TWO RED BUTTONS TO RUN

JOB NAME:

JOB NUMBER	0	0.00	NON-STICK MODE
QUANTITY		LENGTH (inches)	INFEEED (inches)

CURRENT COUNT: 0

EJECT / RELOAD

JOBS

RUN LOAD CLEAR SETUP

5. PRESS BOTH RED BUTTONS ON THE SIDE OF THE MACHINE TO NOW "RUN"

RUNNING

JOB NAME:

JOB NUMBER	5	2.00	NON-STICK MODE
QUANTITY		LENGTH (inches)	INFEEED (inches)

CURRENT COUNT: 1

EJECT / RELOAD

PAUSE

JOBS

RUN LOAD CLEAR SETUP

6. CONFIRM STATUS SHOWS "RUNNING"